



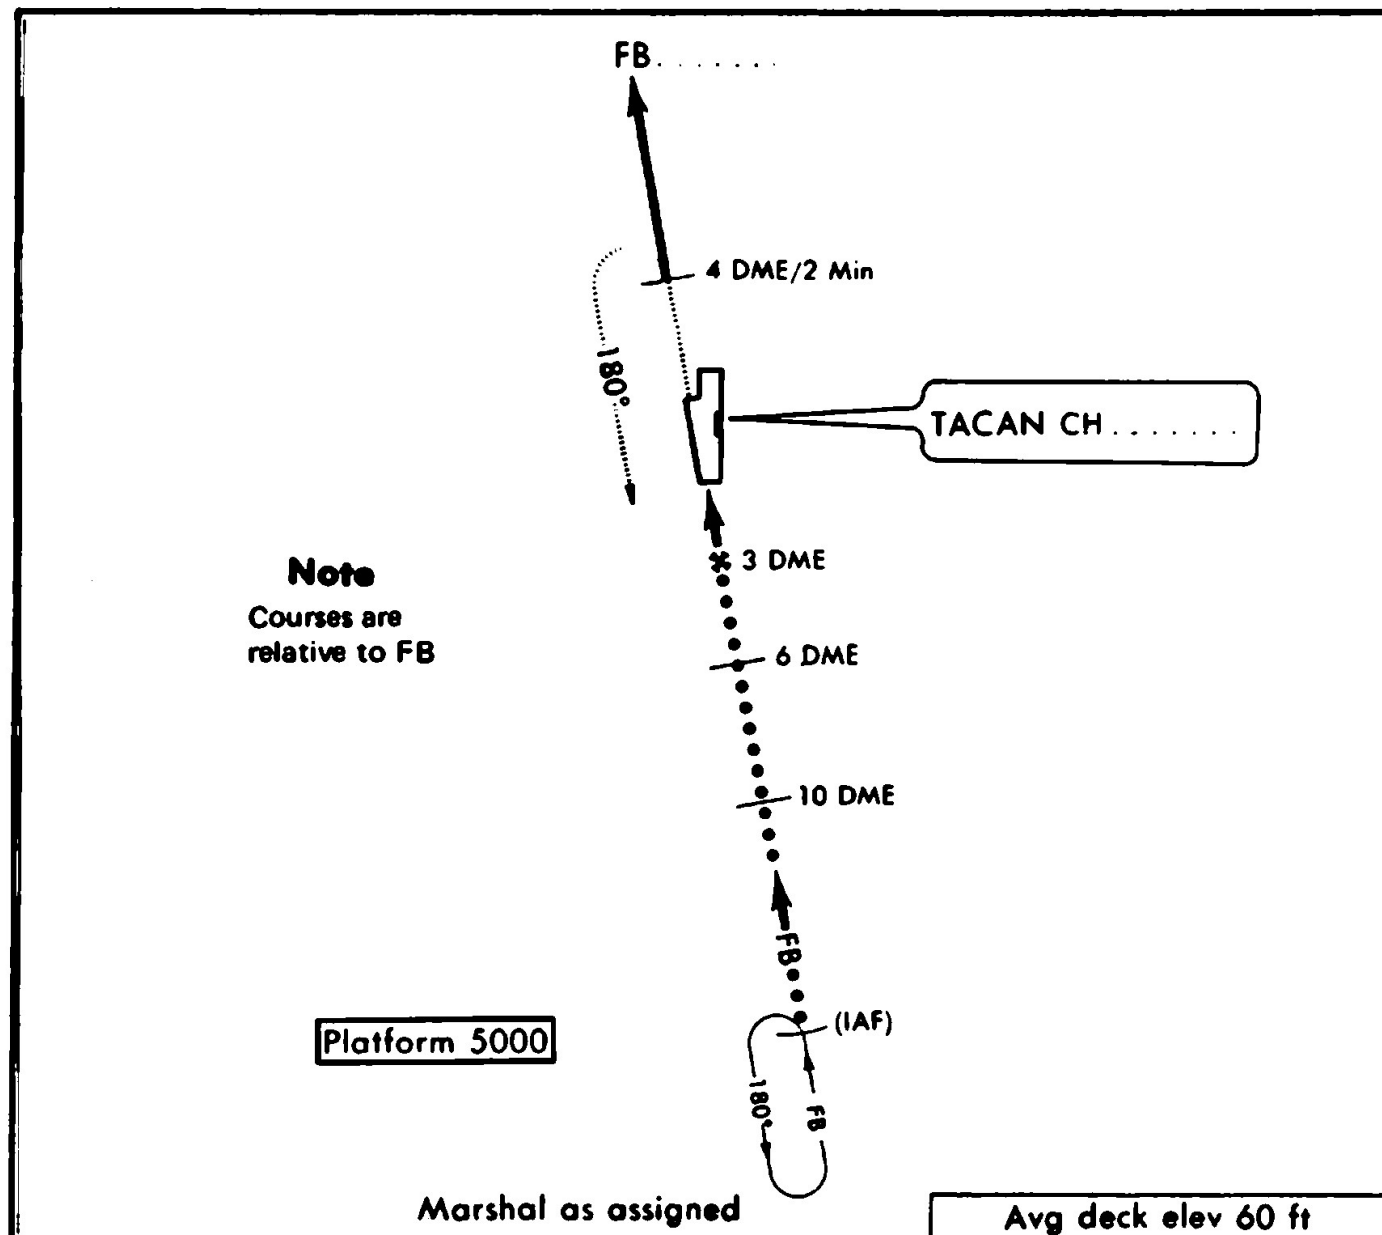

BOLTER/WAVEOFF

If no instructions by 4 DME/2 Min, turn downwind, report abeam. If no COMM, commence turn to FB at 4 DME.

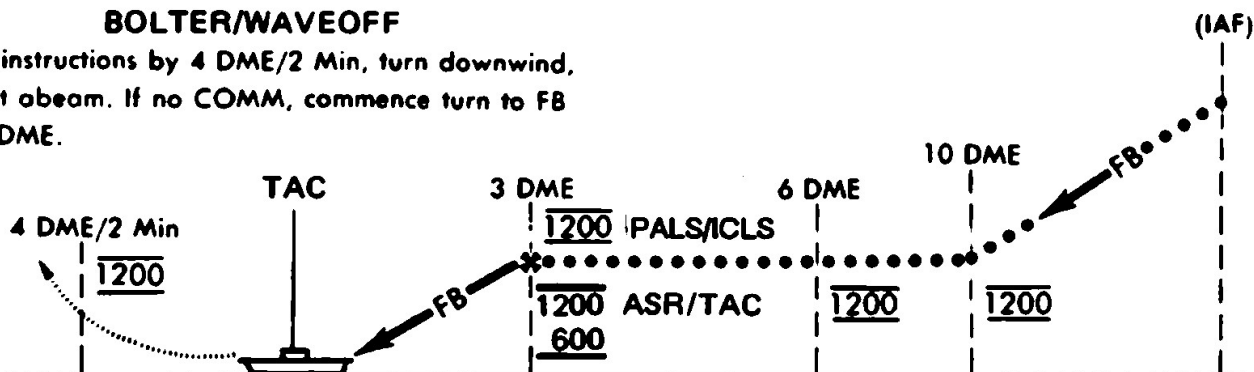

CATEGORY	JET	TURBOPROP
ICLS	360-3/4	300 (300-3/4)
ICLS/ILM with SPN-42/46 monitor	(Mode 1 — As Certified)	
S—PALS	260-1/2	200 (200-1/2)
S—ASR	600-1-1/4 540 (600-1-1/4)	400-1 340 (400-1)
S—TAC		

Figure 5-2. Approach Chart CV-1 TACAN (Jet and Turboprop)