


## Pattern Altitude 2500

Depart Southwest from the departure end of RW 21 Left and Right. Use right traffic for 21R and left traffic 21L.

Climb at 500 FPM till reaching 70 K, then turn 90 degree to crosswind leg.

When you reach 2500, turn downwind and accelerate to 90 K.

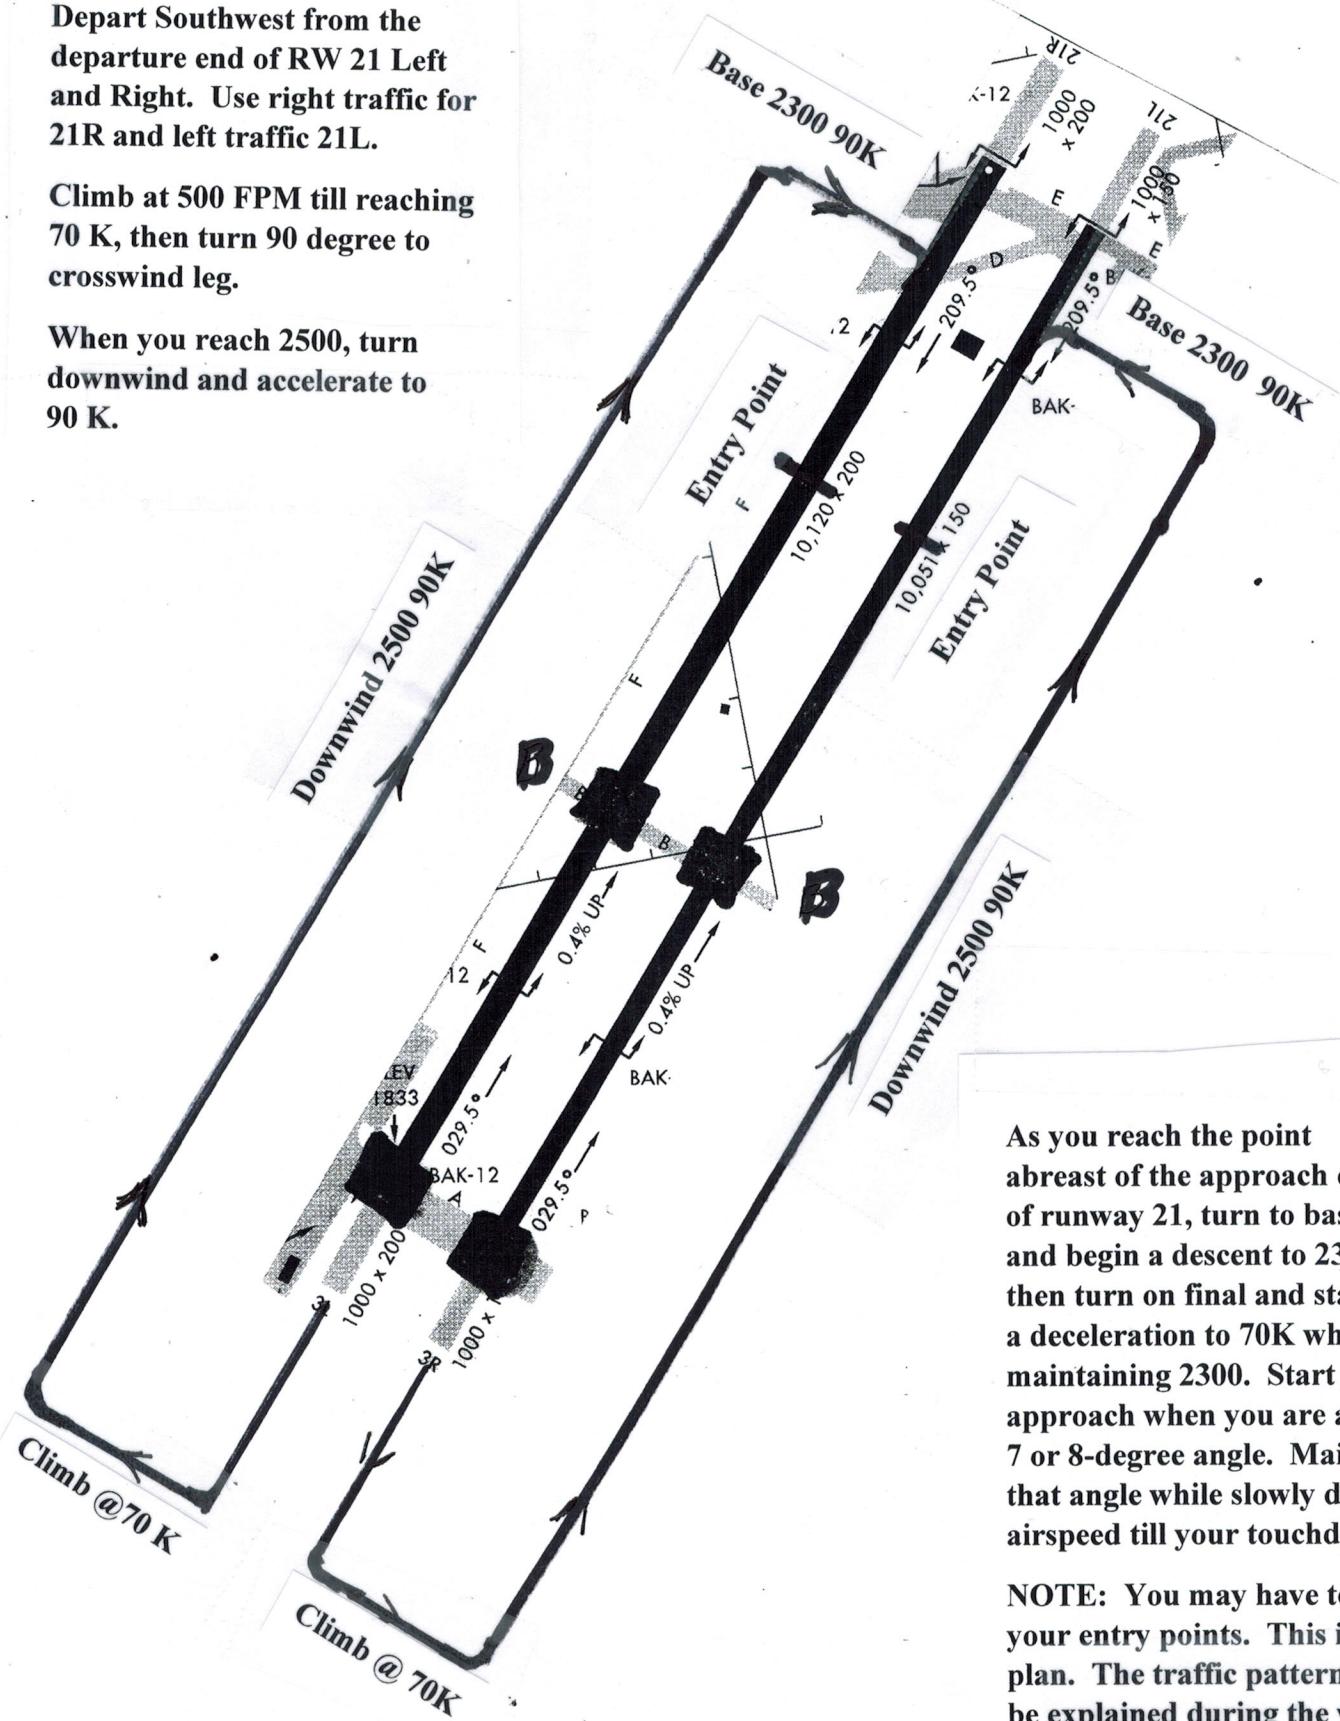

As you reach the point abreast of the approach end of runway 21, turn to base and begin a descent to 2300 then turn on final and start a deceleration to 70K while maintaining 2300. Start your approach when you are at a 7 or 8-degree angle. Maintain that angle while slowly decelerate airspeed till your touchdown

**NOTE:** You may have to adjust your entry points. This is only a plan. The traffic pattern will be explained during the workshop.